

# HELI

## DIESEL PNEUMATIC TIRE FORKLIFT

- ENHANCED COMFORT THROUGH INNOVATIVE DESIGN
- LEGENDARY HELI QUALITY
- LOW COST OF OWNERSHIP
- POWERFUL PERFORMANCE



4,000-7,000 Lbs

CPCD20

CPCD25

CPCD30

CPCD35



[www.HeliForkliftUSA.com](http://www.HeliForkliftUSA.com)


MANUFACTURER: ANHUI HELI CO., LTD.

DISTRIBUTOR: SOUTHWEST EQUIPMENT SALES • 4105 GLOBEVILLE ROAD, DENVER, CO 80216  
TEL: 888-NEW-HELI (639-4354) • FAX: 303-468-9901



**SPECIFICATIONS**

Manufacturer		HELI			
Model		CPCD20	CPCD25	CPCD30	CPCD35
Load Capacity	lbs	4,000	5,000	6,000	7,000
Load Center	in	24	24	24	24
Lifting Speed	ft/min	108	168	98	65
Max. Travel Speed	mph	10.6	10.6	11.2	11.8
Max. Drawbar Pull (Without/with load)	lbs	2,767/3,239	2,767/3,239	2,567/2,924	2,037/3,487
Max. Gradeability (Without/with load)	%	18/20	18/19	15/19	15/15
Tilt Angle (F/B)	Y deg	6/12	6/12	6/12	6/12
Overall Height Forks Raised	A in	170	170	179	183.5
Max. Fork Height	B in	130	130		
Overall Height Upright Lowered	C in	84.4	84.4	87.4	91.7
Free Lift	E in	12.8	12.8	12	12
Overall Length (With Forks)	H in	137.8	142.5	147.4	148.2
Overall Length (Without Forks)	I in	97.6	100.4	105.3	106.1
Min. Ground Clearance	G in	4.3	4.3	5.5	5.3
Overhang (Front/Rear)	K/M in	17.7/17	17.7/19.7	18.7/19.7	19.5/19.7
Wheel Base	L in	63	63	67	67
Overall Height (With Overhead Guard)	P in	82.3	82.3	83.3	82.3
Overall Width	Q in	45.3	45.3	46.2	45.2
Opening Of Loads	R in	9.6-40.2	9.6-40.2	9.6-41.7	9.6-41.7
Tread (Front/Rear)	S/T in	38.2/38.2	38.2/38.2	39.4/38.2	39.4/38.2
Min. Turning Radius (Outside)	X in	85.4	88.2	94.5	95.3
Min. Intersecting Aisle	W in	75.6	79.1	83.1	83.1
Fork Size	JUF in	42.1/48.1/57	42.1/48.1/57	42.1/51.77	42.1/51.97
Engine Model			KUSDA V2403		KUSDA V3300
Rated Horsepower	hp/rpm		47/2,500		68/2,400
Rated Torque	ft/lbs/rpm		117.6/1,800		173.4/1,400
Battery Voltage /Capacity	VAh		12/105		
Tires (Front)		7.00-12-12PR	28X9-15-12PR	28X9-15-12PR	30X9-15-12PR
Tires (Rear)		6.00-9-10PR		6.50-10-10PR	
Total Weight	lbs	7,320	8,110	9,330	10,800

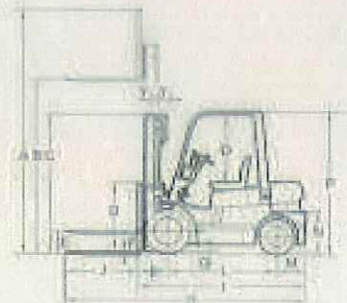

**For Your Safety**

- Before operating a lift truck, an operator must:
- \*Be trained and authorized
  - \*Read and understand the operator's manual
  - \*Not operate a faulty lift truck
  - \*Not repair a lift truck unless trained and authorized
  - \*Have the overhead guard and load backrest extension in place

**During operation, a lift truck operator must:**

- \*Wear a seat belt
- \*Keep entire body inside truck cab
- \*Never carry passengers or lift people
- \*Keep truck away from people and obstructions
- \*Travel with lift mechanism as low as possible and tilted back

**To park a lift truck, an operator must:**

- \*Completely lower forks or attachments
- \*Shift into neutral
- \*Turn key off
- \*Set parking brake



CE Certification



ISO9001 Certification



**Southwest  
Equipment  
Sales**

HELI DISTRIBUTOR FOR WESTERN USA

US2007-1005-30-A